


KENDALL HOWARD ®

Assembly Instructions **4-Post Adjustable Rack**

Part Numbers:

1940-3-100-24

1940-3-100-45

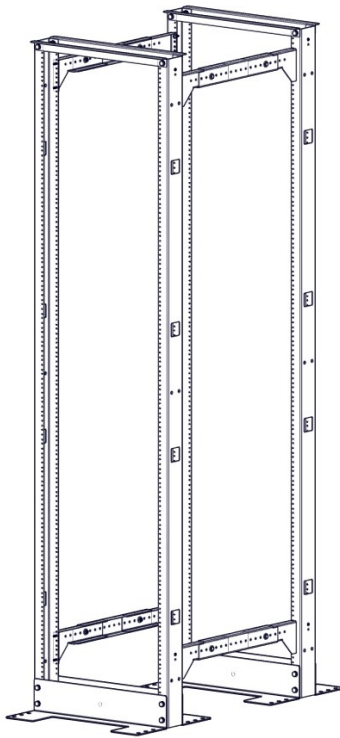


Address: 10152 Liberty Lane
Chisago City, Minnesota, 55013
United States of America













Phone: 651-213-1333
Fax: 800-418-6897

www.kendallhoward.com


Tools needed:

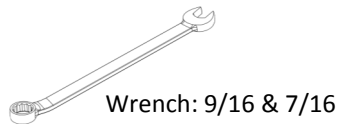


What's in the box:

       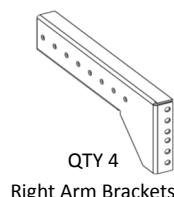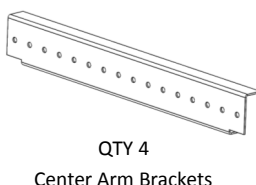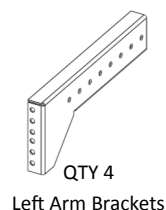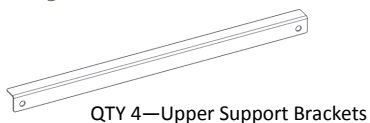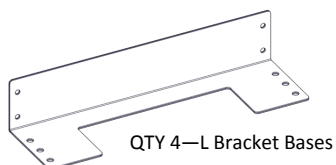


Step 1 : Assemble the L Bracket Bases to the Vertical Rails as shown below. Do this for all four Rails and L Bracket Bases.

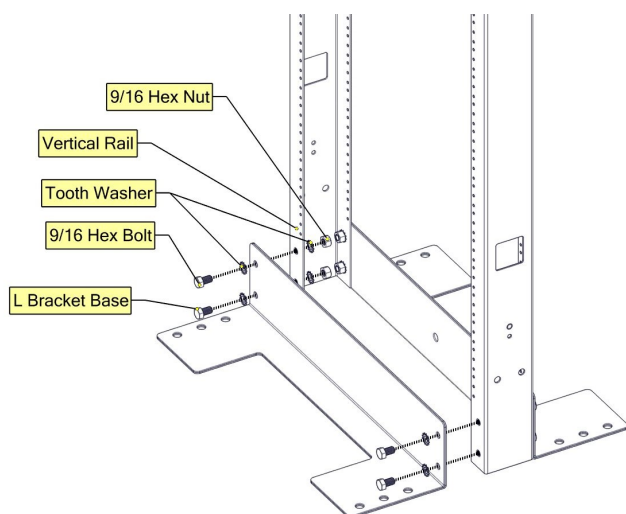

Step 2 : Assemble the Upper Support Brackets to the top of the Vertical Rails as shown below. Do this for all four Rails and Upper Support Brackets.

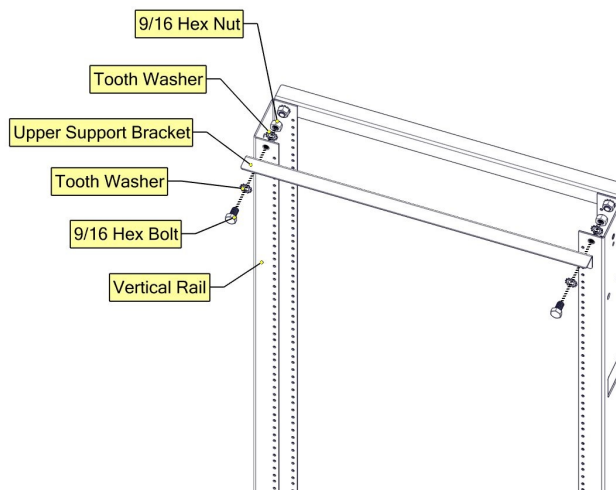


Step 3:

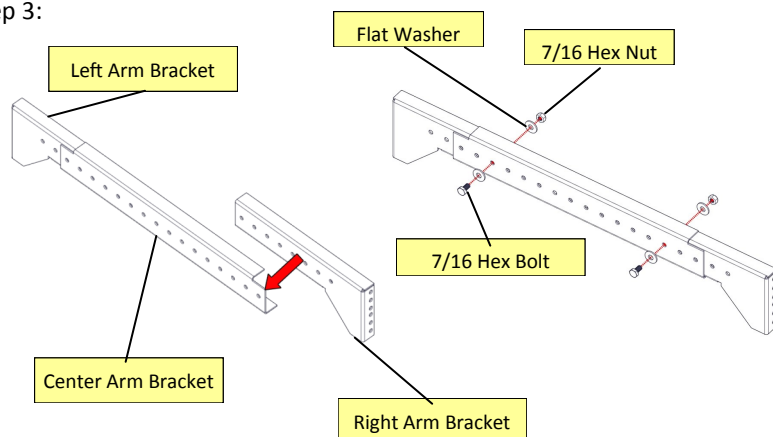

Insert the Left and Right Arm Brackets into the Center Arm Bracket as shown and secure with included 7/16 hardware. Make sure you set them for your desired depth. Follow this step for each of the arm assemblies.

* Note - Be sure the Center Arm is centered so the weight is evenly distributed.

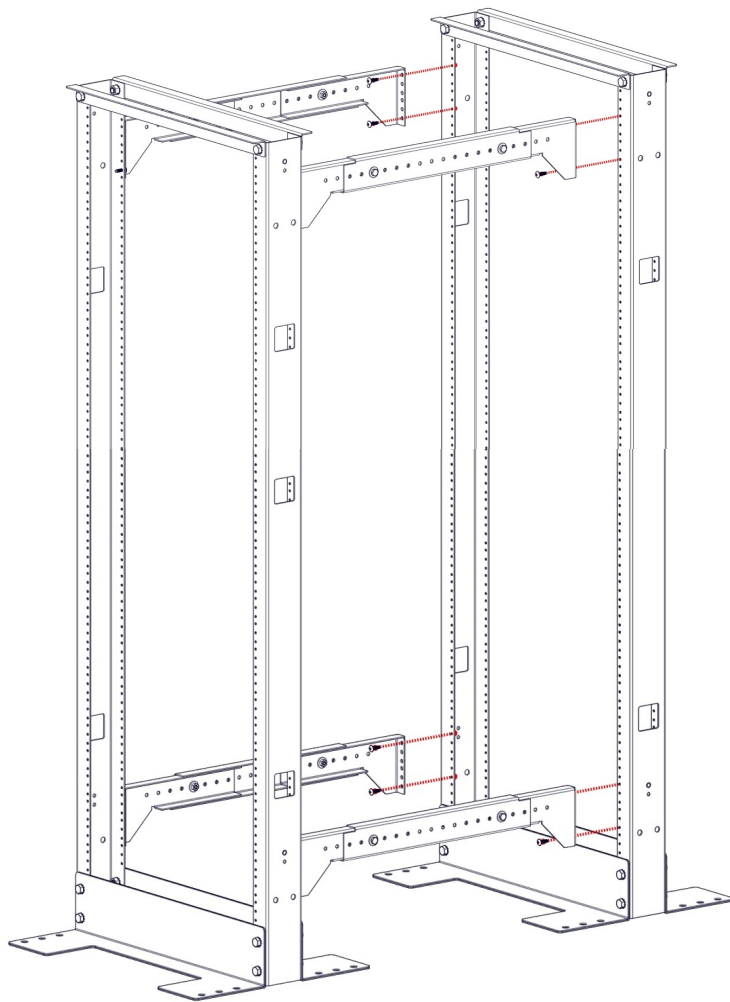


Step 4:

Mount one arm at a time to each side using the included 10-32 Rack Screws. Place the arm assemblies at the upper corners and lower corners. The more screws that you use to mount the arms, the stronger the overall rack will be. Each arm allows for six screws per side. To maintain the published weight capacity, six screws are required.

To adjust the racks depth:

Take out the 7/16 hardware in the arm assemblies and slide the two sides together or apart and reinstall hardware in the arm assemblies.

Grounding Studs: Note that there are 1/4-20 Grounding Studs on the top and bottom of each Vertical Rail. See placement below.

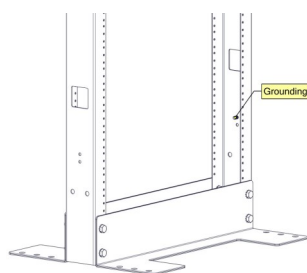

Bottom Location




Top Location

Rack Screws:

For your convenience, fifty 10-32 rack screws have been provided to install rackmount equipment into your new relay rack. If you should need additional hardware please contact us, or an authorized reseller, today.

PHONE: 651-213-1233

Email: sales@kendallhoward.com

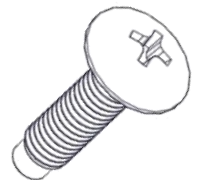

For details about product warranty, please visit www.kendallhoward.com

DISCLAIMER: Kendall Howard LLC. endeavors to make this manual accurate and complete. However, Kendall Howard LLC makes no representations or warranties of any kind, expressed or implied, about whether the use of products contained herein would infringe any rights or the correctness, accuracy or reliability of the information contained herein or that said information covers all details, conditions or variations. The information herein does not provide for every possible contingency in connection with the installation or use of the product(s). The information contained in this document is subject to change without notice or obligation. Kendall Howard LLC assumes no responsibility for the accuracy, completeness or reliability of the information contained in this document. Any reliance placed on the information is therefore strictly at your own risk.