
StarTechcom

Hard-to-find made easy®

Wall-Mount Bracket for Shallow Rack-Mount Equipment - 4U

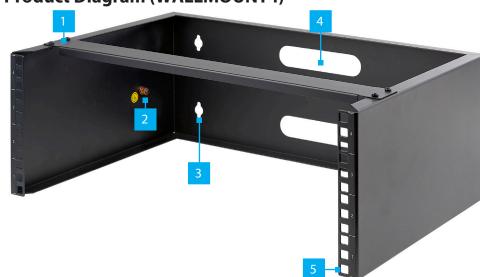

| Component | | Function | |
|-----------|---------------------------------|--|--|
| 1 | Stabilizer Bar | Stabilize the Wall-Mount Bracket when equipment is loaded | |
| 2 | Grounding Stud | Attach a Grounding Wire (sold separately) to the Wall-Mount Bracket and to an Earth Ground Connection | |
| | | Wall mount the Wall-Mount Bracket | |
| 3 | Installation Holes (x 4) | Note: Product mounting should be completed by a certified professional as per the local safety and building code guidelines. | |
| | | (Optional) Route the equipment Cables | |
| 4 | Cable Management Slots (x 2) | Notes: An appropriate size hole in the wall will be necessary, behind the Wall-Mount Bracket, to route the Cables . | |
| | | The Cables can be routed out of the bottom of the Wall- Mount Bracket | |
| 5 | Cage Nut Holes | Use Cage Nuts to mount equipment into the Wall- Mount Bracket | |

Product Diagram (WALLMOUNT4)

Package Contents

- Wall Mounting Bracket for Patch Panel x 1
- M6 Screws x 16
- M6 Cage Nuts x 16
- M6 Plastic Cup Washers x 16
- Plastic Wall Anchors x 4
- M5-25 Flat-head screws x 4
- Quick-Start Guide x 1

Requirements

For the latest requirements, please visit www.startech.com/WALLMOUNT4

- Grounding Wire x 1
- Earth Ground Connection x 1
- Phillips Head Screwdriver
- 10mm Wrench x 1
- (Optional) Cage Nut Tool x 1

Grounding the Wall-Mount Bracket

- 1. Remove the **M6 Nut** on the **Grounding Stud** with a **10mm Wrench**.
- 2. Slide the Grounding Lug from the Grounding Wire over the Grounding Stud.
- 3. Thread the **M6 Nut** onto the **Grounding Stud** and tighten with a **10mm Wrench**.
- 4. Attach the other end of the Grounding Wire to an Earth Ground Connection.

Adding Equipment to the Wall-Mount Bracket

Use the included **M6 Cage Nuts**, **Screws**, and **M6 Plastic Cup Washers** to install equipment into the **Wall-Mount Bracket**.

- 1. Insert the **Wing** (side) of an **M6 Cage Nut** into the back of the desired **Cage Nut Hole**.
- 2. Apply pressure by hand, or with the **Cage Nut Tool**, to insert the second **Wing** of the **M6 Cage Nut** into the desired **Cage Nut Hole**.
- 3. Repeat steps 1 and 2 to insert the desired number of **Cage Nuts** for the application.
- 4. Thread an **M6 Plastic Cup Washer** over an **M6 Screw**. Repeat until the desired number of **M6 Screws** have been prepared.

- 5. Align the **Mounting Holes** in the **Equipment** with the **M6 Cage Nuts** installed in steps 1-3.
- 6. Insert the assembled **Screws** and **M6 Plastic Cup Washers** through the **Mounting Holes** in the **Equipment** and into the **M6 Cage Nuts**.
- 7. Tighten the Screws, using a Phillips Head Screwdriver.

Warnings

Ensure the weight of the equipment does not exceed the weight capacity of this product. If the weight capacity is exceeded, you may experience personal injury or damage to the equipment. This product can support the following weight: up to 20 kg (44 lb.).

Wall structures vary. Ensure the type of wall structure and mounting hardware will properly support the mounted equipment. Failure to do so might result in personal injury and/or equipment damage. The wall structure should be capable of supporting at least four times the weight of the mounted equipment

This product requires an earth ground connection. Do not use this product without an earth ground connection

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

PHILLIPS® is a registered trademark of Phillips Screw Company in the United States or other countries.

Warranty Information

This product is backed by a lifetime warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

| StarTech.com Ltd. | StarTech.com LLP | StarTech.com Ltd. | FR: fr.startech.com |
|--|--|---|---|
| 45 Artisans Cres London, Ontario N5V 5E9 Canada | 4490 South Hamilto Road Groveport, Ohio 43125 U.S.A. | onUnit B, Pinnacle 15 Gowerton Rd, Brackmills Northampton NN4 7BW United Kingdom | DE: de.startech.com ES: es.startech.com NL: nl.startech.com IT: it.startech.com JP: jp.startech.com |