




## F Clamp

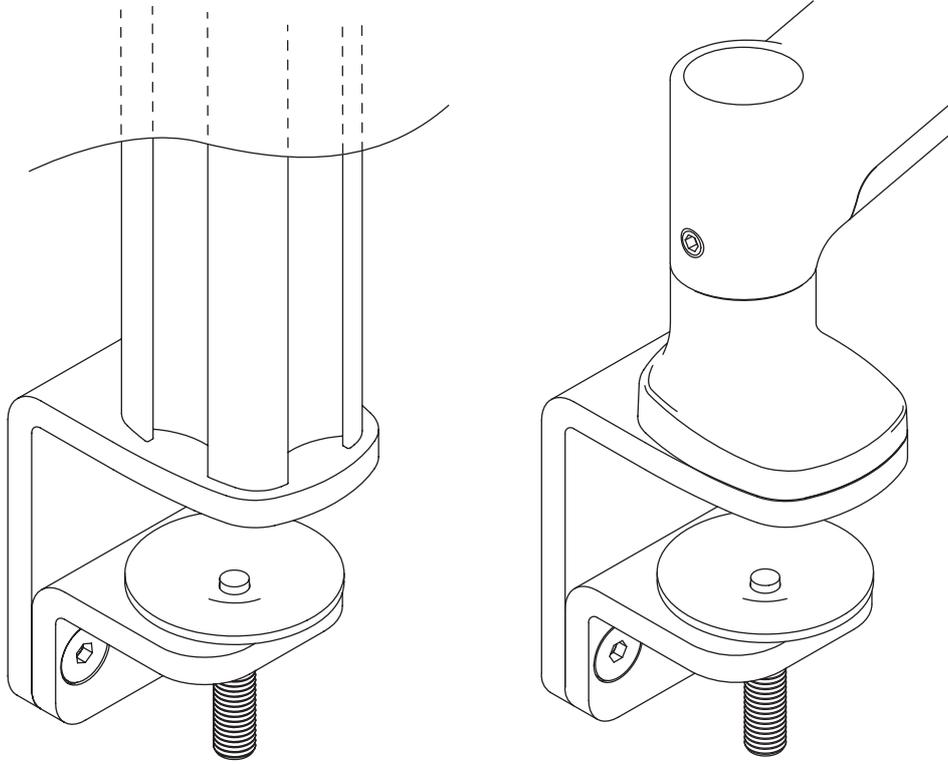

### COMPONENT CHECKLIST

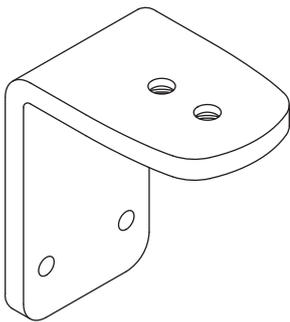


**A**  
Upper Clamp  
(x1)

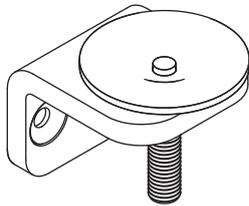

**B**  
Lower Clamp  
(x1)



**C**  
Screw  
M8 x 16mm  
(x2)

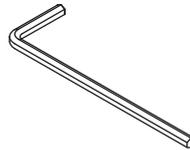

**D**  
5mm  
allen key  
(x1)

Desk 

### REQUIRED TOOLS


- All tools provided

### IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! This product is compatible with Atdec AWM Series products.
- ! The manufacturer accepts no responsibility for incorrect installation.


## 1. Attach post or base to upper clamp

### 1.1 Option A - Attach post to upper clamp

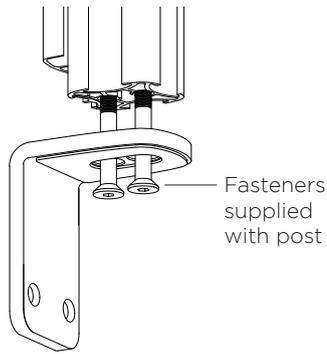

Note: post sold separately



### 1.2 Option B - Attach base to upper clamp

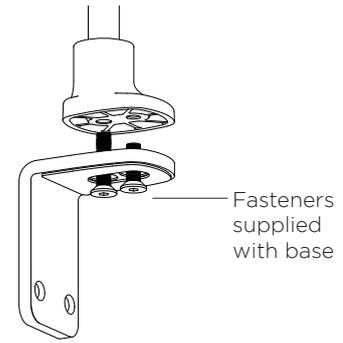


Note: base sold separately

## 2. Attach lower clamp to upper clamp

### 2.1 Measure the worksurface thickness and choose the suitable lower clamp position

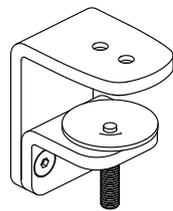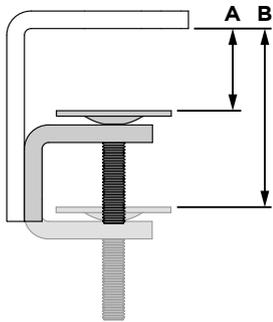


**A - Normal**  
0 - 36mm  
(0.00 - 1 3/8")

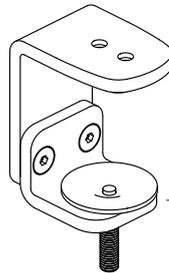


**B - Inverted**  
36 - 79mm  
(1 3/8" - 3")

### 2.2 If using inverted position change the screw direction of the lower clamp

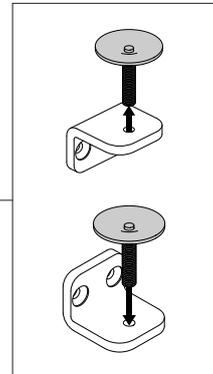


### 2.3 Attach lower clamp to upper clamp in the suitable position using the two provided screws. (Normal position shown here)

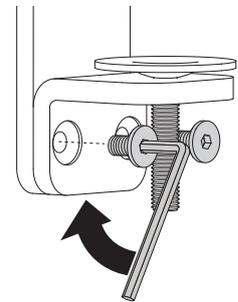


**Note:** If there is only a small gap behind the worksurface, perform **Step 3.1** before this step.

## 3. Fit fixing to work surface

### 3.1 Place in desired location on worksurface

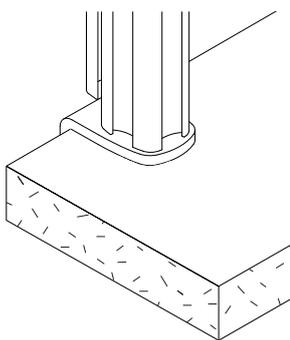

Post Installation

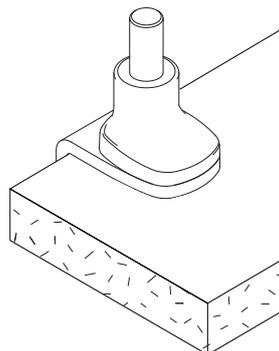

Base Installation

### 3.2 Screw in pressure plate and **tighten firmly.**

